
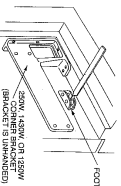



INSTRUCTIONS FOR INSTALLING THE SARGENT® 250W, 1430W, OR 1250W CORNER BRACKET

REGULAR ARM ILLUSTRATED
USE THESE INSTRUCTIONS
FOR OTHER ARM TYPES

A




USING DATA SHEET SUPPLIED WITH CORNER BRACKET, LOCATE AND MOUNT BRACKET TO FRAME, ATTACH FOOT TO DOOR WITH PIVOT AWAY FROM HINGE, AS ILLUSTRATED FOR ARM TYPES "V" AND "P." SEE DATA SHEET FOR A CORRECT POSITIONING OF TYPE "H" FOOT.



NOTE: WHEN REQUIRED ADDITIONAL CLOSING POWER MAY BE OBTAINED BY MOVING PIVOT TO HOLE NEAREST HINGE.


B

ATTACH CLOSER TO BRACKET WITH SHORT END OF CLOSER FACING TOWARD HINGE

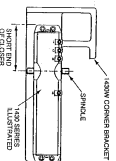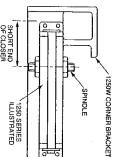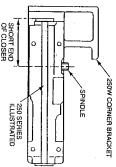


C

1. ASSEMBLE MAIN ARM TO CLOSER WITH INDEX MARK ON SPINDLE ALIGNED WITH AXIS OF ARM AS ILLUSTRATED BELOW. ATTACH ARM WITH WASHER AND SCREW.

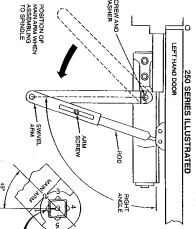

2. OPEN DOOR AND INSERT RECTANGULAR ROD INTO SWIVEL (OR HOLD OPEN) ARM-THEN CLOSE DOOR AND TIGHTEN ARM SCREW SECURELY WHEN MAIN ARM IS AT RIGHT ANGLE TO DOOR. SEE ILLUSTRATIONS BELOW.

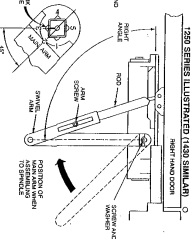

D

SEE INSTRUCTION SHEET FURNISHED WITH CLOSER FOR
INSTALLING COVER AND FOR FINAL ADJUSTMENT INFORMATION.