

INSTRUCTIONS FOR REMOVAL AND INSERTION OF SARGENT PLASTIC CONSTRUCTION PLUGS FOR 6500 LINE BORED LOCKS

SARGENT
ASSA ABLOY


For installation assistance call SARGENT at 1-800-727-5477 • www.sargentlock.com

ASSA ABLOY, the global leader
in door opening solutions

A

REMOVING PLASTIC CONSTRUCTION PLUGS

GRASP PLUG HEAD FIRMLY
AND PULL OUT TO REMOVE
PLASTIC CONSTRUCTION PLUG.

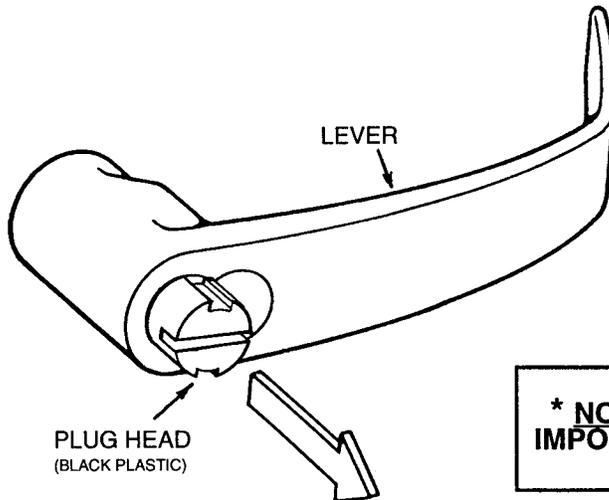


*** NOTE:
IMPORTANT**

**RETAIN TAILPIECE FOR USE WITH
PERMANENT CYLINDER.**

B

INSERTING PLASTIC CONSTRUCTION PLUGS

6500 LINE LOCKS SHOULD BE ASSEMBLED AND HAVE OUTSIDE
LEVERS LOCKED (BY INSIDE LEVER PUSH OR TURN BUTTON).

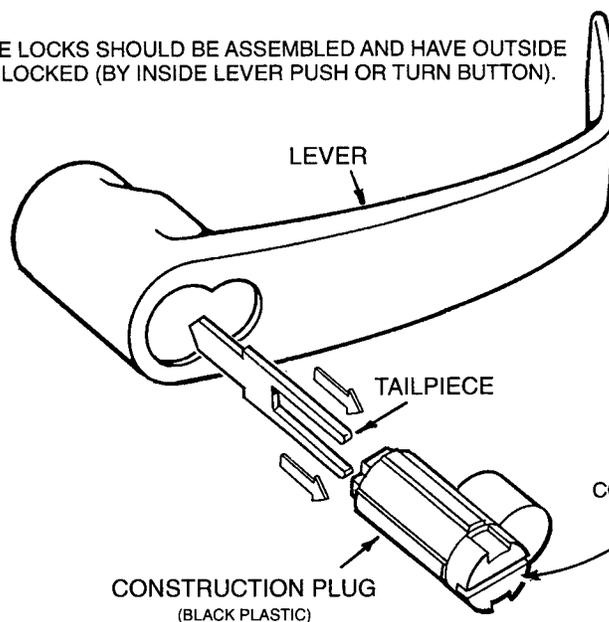

INSERT TAILPIECE INTO THE TWO HOLES
ON THE BACK OF THE PLASTIC CONSTRUCTION
PLUG AS SHOWN.

WITH NOTCH HORIZONTAL, SLIDE PLASTIC
CONSTRUCTION PLUG INTO THE LEVER CYLINDER HOLE
AND PRESS ALL THE WAY IN.

INSTRUCTIONS FOR REMOVAL AND INSERTION OF SARGENT PLASTIC CONSTRUCTION PLUGS FOR 6500 LINE BORED LOCKS


For installation assistance call SARGENT at 1-800-727-5477 • www.sargentlock.com

ASSA ABLOY, the global leader
in door opening solutions


A

REMOVING CYLINDER CORE

6500 LINE LOCKSETS SHOULD BE ASSEMBLED AND HAVE OUTSIDE LEVERS LOCKED (BY INSIDE LEVER, PUSH OR TURN BUTTON).

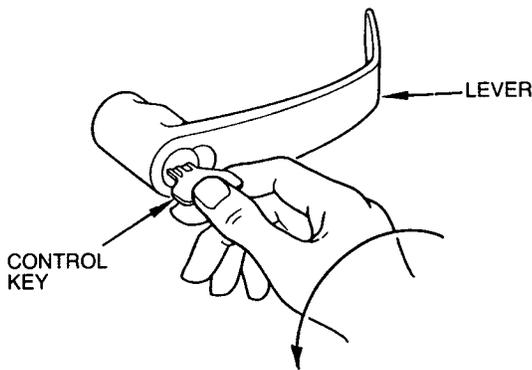

THEN INSERT CONTROL KEY AND TURN COUNTER-CLOCKWISE UNTIL STOP IS REACHED. (CLOCKWISE FOR BEST, ARROW, AND FALCON).

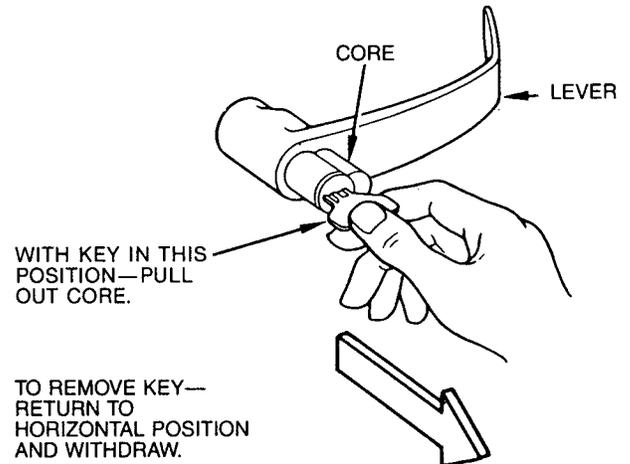

WITH KEY IN THIS POSITION—PULL OUT CORE.

TO REMOVE KEY—RETURN TO HORIZONTAL POSITION AND WITHDRAW.

*** NOTE:
IMPORTANT**


**RETAIN TAILPIECE FOR
FUTURE USE.**

B


INSERTING CYLINDER CORE

6500 LINE LOCKS SHOULD BE ASSEMBLED AND HAVE OUTSIDE LEVERS LOCKED BY INSIDE LEVER PUSH OR TURN BUTTON.

INSERT APPROPRIATE TAIL PIECE INTO THE TWO HOLES ON THE BACK OF THE CYLINDER CORE ("6 PIN" FOR SIX PIN CYLINDERS, "7 PIN" FOR BEST SEVEN PIN CYLINDER.) THEN INSERT CONTROL KEY INTO REPLACEMENT CORE AND TURN COUNTER-CLOCKWISE UNTIL STOP IS REACHED. SLIDE CORE INTO LEVER.

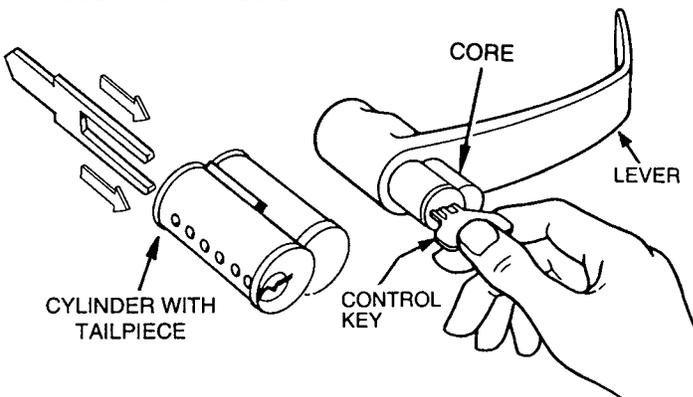

TO REMOVE KEY, RETURN TO HORIZONTAL POSITION AND WITHDRAW.

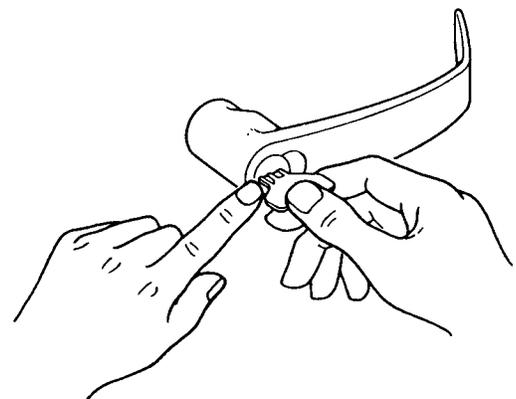

NOTE: FOR EASIER REMOVAL, HOLD CORE IN PLACE WHILE STARTING TO WITHDRAW KEY.